

INSTALLATION & CLEANING INSTRUCTIONS
HONDA AERO SHADOW 750
MODEL'S 334 & S334

PARTS INVENTORY

<u>Item</u>	<u>Quantity</u>
56 MM HEX SPOOL BOLT ASSEMBLY	2
46 MM HEX SPOOL BOLT ASSEMBLY	2
22 X 10.4 X 5MM BLACK PLASTIC SPACER	6
22 X 10.4 X 10MM BLACK PLASTIC SPACER	4
SILICONE	1
TURN SIGNAL RELOCATION KIT includes:	
ELECTRICAL WIRE	96"
6 x 25 MM HEX CAP SCREW	2
6 MM LOCKNUT	2
1/4" FLATWASHER	4
1/4 X 1" FLAT WASHER	4
CONNECTORS	8
1/4-20 X 1 1/4" HEX CAP SCREW	2
1/4-20 LOCKNUT	2
TURN SIGNAL RELOCATION BRACKET	1
TIE WRAPS	5
WIRE CLAMP	1

TURN SIGNAL RELOCATION

1. Refer to Figure 2. Remove seat.

SAFETY: DISCONNECT BATTERY PRIOR TO ALL WIRING MODIFICATIONS

2. Disconnect wires to turn signals and taillights under seat.
3. Remove three bolts on each side that secures fender to strut.
4. Lower fender onto tire and remove.
5. Remove turn signals from fender strut. Observe and mark "left" and "right" for reinstallation.
6. Cut each turn signal wire 3" from connector end and splice 24" of electrical wire.

Turn signal bracket must be oriented forward (ears of bracket to the front).

7. Remove license plate light mounting bolts. Remove grommet. Route turn signal wires through empty grommet hole, Refer to inset in figure 2, route wire past the taillight and through the existing hole in the fender. Using the wire clamp on the right side taillight bolt. Secure wire to taillight wire with the supplied tie wraps.
8. Install turn signal bracket between license plate and license plate bracket using 1/4-20 x 1 1/4" Hex Cap Screw, 1/4" flat washer, 1/4" x 1" flat washer, and 1/4" nut.
9. Mount turn signals to bracket. Secure stalk to bracket using 6 x 25mm Hex Cap Screw with a 1/4" flat washer.

Information: Not all license plate mounts are grounded. In some cases, it may be necessary to run a ground wire to turn signal bracket.

WARNING: States may have minimum width requirements on motorcycle turn signals, so check your local laws.

10. Install license plate light.
11. Secure wires under fender using wire clips utilizing one of the bolts of the taillight. Route wires through existing hole in fender.

SADDLEBAG INSTALLATION

1. Refer to Figure 1.
2. Install the factory turn signal bolt into the original turn signal hole with the addition of a 1/4 x 1" flat washer, and 6mm locknut inside of fender strut.
3. Reinstall fender and fender struts. In the front mounting hole use the 56mm Hex Spool Bolt Assembly, 22 x 10.4 x 5mm and 22 x 10.4 x 10mm Black Plastic Spacer. In the rear mounting hole use the 46mm Hex Spool Bolt Assembly, and (2) 22 x 10.4 x 5mm and (1) 22 x 10.4 x 10mm Black Plastic Spacers.
4. In the middle mounting hole reuse the factory bolt.
5. Repeat procedure on opposite side.

6. Connect battery and test turn signals for function.
7. Install seat.
8. Mount saddlebags over spools on fender strut and secure with clips, retained inside bags. Saddlebags will be easier to mount and remove if a small amount of silicone lubrication is applied to the rubber mounting points.
9. Inspect each clip to verify each clip is properly seated in retaining groove. See View "A".


SADDLEBAG CARE INSTRUCTIONS

- Do not exceed 20 lbs. per saddlebag this includes sitting or standing on bags, it is a common occurrence for a non-rider to attempt to sit on bags, this also may void warranty.
- Periodically, apply a small amount of silicone lubrication to rubber mounting points. Saddlebags will be easier to mount and remove.
- Remove grease, oil or mud with mild detergent and water. For fast touch-up, *Windex or Turtle Wax Formula 2001* will restore original luster. The use of any other chemicals may discolor the saddlebags.
- Whenever possible, release locks on saddlebag lids to allow the gaskets to expand during storage.
- If you use bags to ice down drinks, later remove bags, drain water and blot up excess water. The foam interior lining is closed-cell foam and does not retain water. Leave lids open until interiors are dry.
- Use gray *Scotch Brite* scour pad (ultra-fine, only) to remove scratches & shiny spots and restore luster. This can be purchased at an automotive supply store.
- When locking or unlocking saddlebags, place one hand on top of bag near lock and apply a moderate amount of pressure while turning the key. This compresses the weather-seal enabling the locking mechanism to turn freely.
- Always inspect to verify each of the saddlebag mounting clips on inside of bag are properly installed when mounting bags. Clips fit into groove on mounting spool. Failure to perform this correctly can cause severe damage and may void warranty.

Installation Instructions Honda Aero Shadow 750 Model# 334 & S334

Figure 1

← FRONT

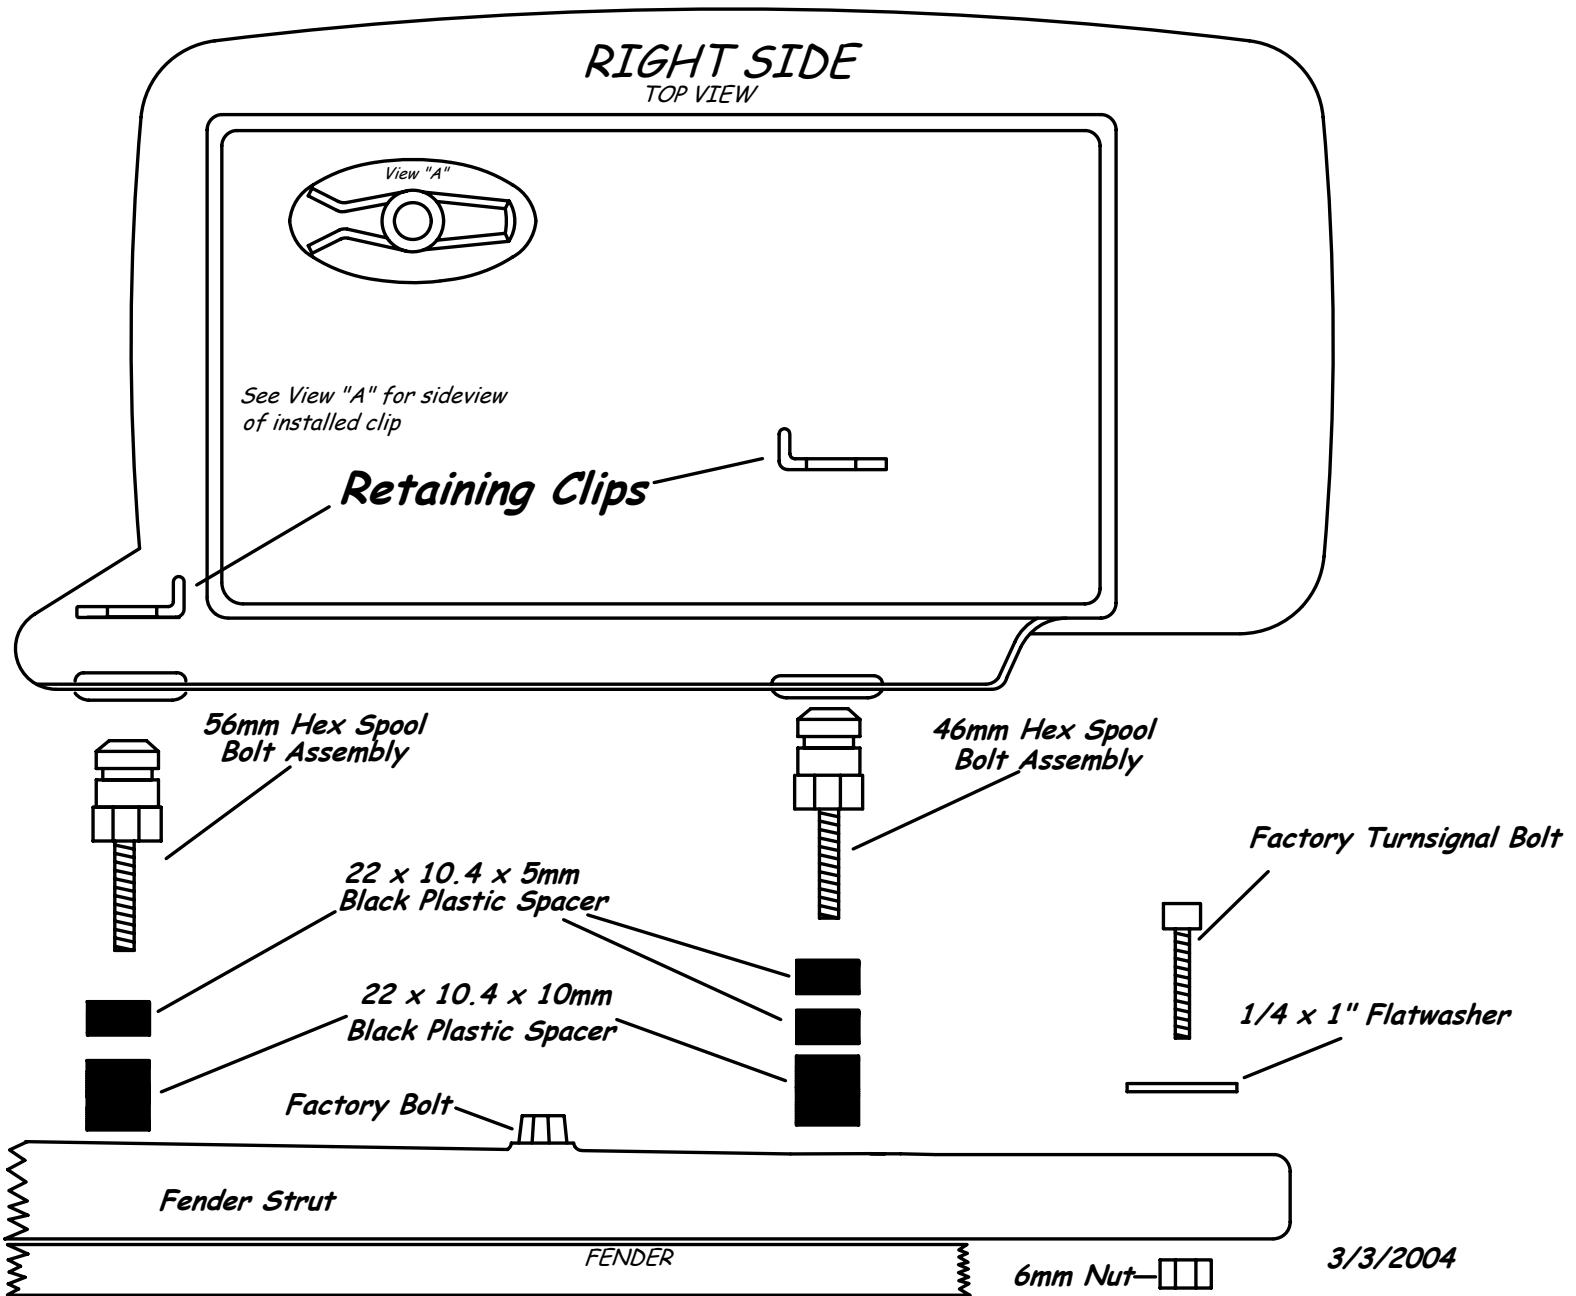

Turn Signal Relocation Honda Aero Shadow 750 Model# 334 & S334

Figure 2

