

SHOW CHROME GRIP INSTALLATION

By PastorLG

Installation by these instructions will take about 20 minutes beginning at step 3
Getting the grips can be weeks!

Step #1 – Buy the Grips....this is the hardest part!

- NOTE - you will also need to purchase glue as it does not come with the grips
The service tech said he would recommend the Renthal Grip Glue for this application

Step #2 – Tools

Long thin pick
Razor knife/blade
Hex wrench 5/32 (if using comfort wrist cruise attachment)
Small can of contact/electronic cleaner with straw
Shop towel
Flat screwdriver

Step #3 – Remove end caps of stock grips

The clutch side pops off with a bit of pressure from the edge of a flat screwdriver
The throttle side unscrews counterclockwise direction (normal)



Step #4 – Remove stock grips

Begin by pulling up the edges with a bit of pressure.
Insert the pick in a few inches by along the chrome one left and plastic sleeve on right.

- Insert straw and spray a small amount of contact cleaner into grip.
Run pick around handle bar loosening glue.
Remove pick. Twist grip and that portion will be loose.
Reinsert pick to the end and again spray with contact cleaner.
Run pick around hand bar loosening remaining glue.
Remove pick. Twist grip and pull to remove grip
- NOTE – Throttle grip should be twisted forward







Step #5 – Clean bar & throttle sleeve

Spray another shot of contact cleaner and use a rag or thumb pressure to remove **all** old glue.

Use a razor knife on chrome to loosen up if needed


Make sure all surfaces are clean and dry

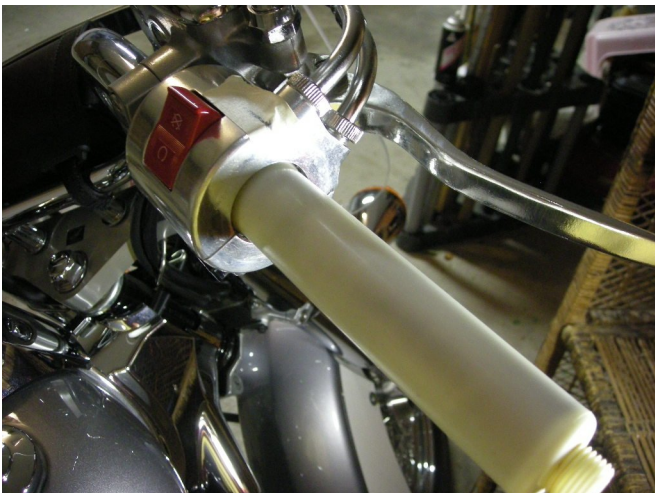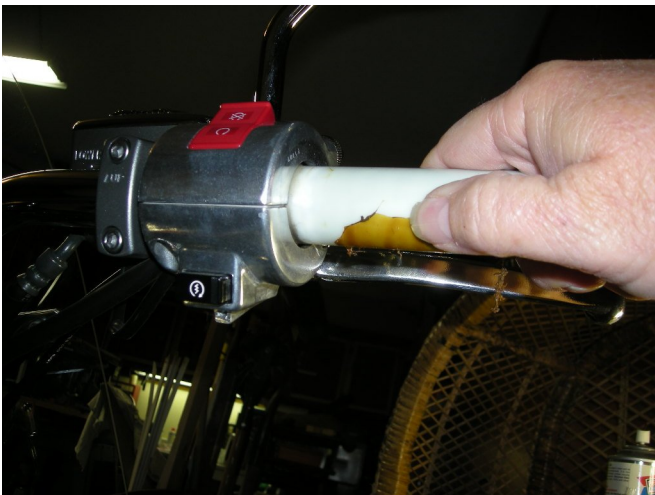

Step #6 – Dry fit new grips – THIS IS IMPORTANT

Each grip goes to a particular side – the throttle side is bigger. The clutch side will be too small for the throttle!

You can dry fit each grip for placement. I found that both went on very tight. A small piece of tape will help alignment if desired – just cut tape at joint and realign
* NOTE – If using a comfort wrist cruise, remove the end cap at this time – it pops off. A small screwdriver pushed from the inside worked very well.

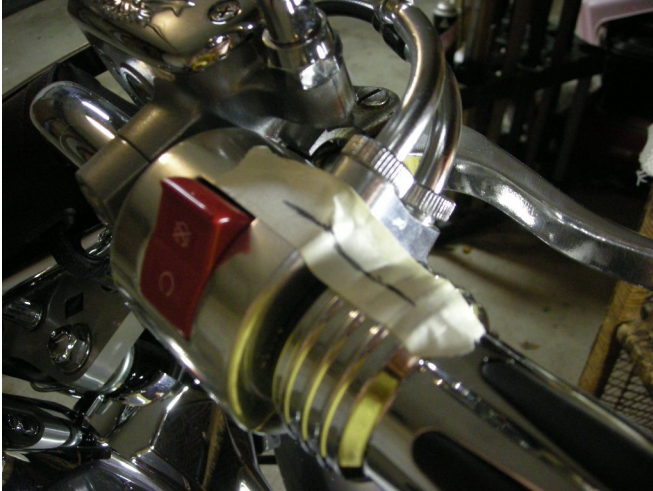

Step #7 – Glue and Apply Grips (one at a time)

Place a moderate bead of glue around the inside perimeter of the grip about 1 inch from the outside edge.
Quickly push the grip onto the handle bar and give it a small twist for placement. Make sure it goes on all the way.
With this glue I was able to move the grip to position very easily.
The throttle side will have some give which will allow the grip to pull back some for movement.



Step #8 – Allow to Dry

As per glue instructions allow 8 hours drying time without moving.

Step #9 – Apply comfort wrist cruise if desired

Place comfort wrist cruise according to comfort and tighten screw with hex wrench

Step #10 – ENJOY – U got R Done!

